UNIVERSAL TERMINAL FEATURES

CORE MENU



The following section provides feature explanations and steps for global terminal settings. Due to the secure multiple application capabilities of the Dejavoo product each host application functions independently, it is for this reason that the Core System Menu is where you will find features that share information of all applications combined.

The Global Terminal features outlined in this section are as follows:

- · Date & Time
- Display Contrast

· Keyboard Beep

- Printer Contrast
- · Security Settings
- · Communication Settings

Backlight Settings

Global Reports

- Global Settlement
- · Loyalty
- · Training Mode



DOWNLOAD SOFTWARE: For assistance with this menu option please contact your Help Desk or Merchant Services provider.

EDIT THE DATE & TIME



Use the steps below to edit the Date & Time in your Dejavoo terminal. It is important to note that when a Dejavoo terminal is powered on it will prompt you to confirm the date and time is correct, when this happens you can press F2 to confirm it is correct or press F4 if it is incorrect and follow the terminal prompts to update to the correct date and time. The time in the terminal must always be entered in 24 hour clock (military) format.



Date is in MM (2 digit month) DD (2 digit day) YY (2 digit year) and Time is in Military format HH (2 digit hour) MM (2 digit minute) SS (2 digit second) both entries done without spaces.

STEP	ACTION	TOUCH SCREEN DISPLAY	
1	Non Touch Screen	Ⅲ	
	Press the F1 key on your terminal to reach the SERVICES menu. Scroll down using the ↑↓ arrow keys to locate and highlight CORE MENU. Once highlighted, press the green OK key.	Credit Debit	
	Touch Screen		
	Press the MENU icon at the bottom left hand corner of your home screen to reach your CORE MENU.	EBT Food EBT Cash	
2	Non Touch Screen	Core Menu	
	Use the ↑↓ arrow keys to locate and highlight UTILITY. If prompted, input manager password, default is 1234.	Settlement Reports-> Favorites->	
	Touch Screen	Utility->	
	Select UTILITY, listed in your CORE MENU, by pressing your terminal screen. If prompted, input manager password, default is 1234.	Retrieve Password Applications-> Power Off	

UNIVERSAL TERMINAL FEATURES

EDIT THE DATE & TIME

STEP	ACTION	TOUCH SCREEN DISPLAY
3	Non Touch Screen	Utility
	Use the ↑↓ arrow keys to locate and highlight SETTINGS.	Settings-> Software Download-> Communications->
	Touch Screen	Favorites->
	Press SETTINGS in the UTILITY menu.	Security-> Training Mode Merchant Portal->
4	Non Touch Screen	Settings
	Use the $\uparrow \downarrow$ arrow keys to locate and highlight DATE AND TIME.	Date And Time Display Keyboard
	Touch Screen	Power Management->
	Press DATE AND TIME in the SETTINGS menu.	Firmware Report Language->
5	Non Touch Screen	Current Date:
	If the date displayed is correct, press OK. If the date displayed is incorrect, use the number keys on your keypad to enter the correct date, using the following format: MM/DD/YY. Press the OK key.	04/24/19
	Touch Screen	
	If the date displayed is correct, press OK. If the date displayed is incorrect, use the number keys on your keypad to enter the correct date, using the following format: MM/DD/YY. Press the OK key.	
6	Non Touch Screen	
	If the time displayed is correct, press OK. If it is incorrect, use the numeric keypad to enter the correct time using 24 hour clock (military) format. See Military Time Conversion Chart on page 83 for guidance. Press the OK key. Terminal returns to the SETTINGS menu.	Local Time: 13:28:14
	Touch Screen	
	If the time displayed is correct, press OK. If it is incorrect, use the numeric keypad to enter the correct time using 24 hour clock (military) format. See Military Time Conversion Chart on page 83 for guidance. Press the OK key. Terminal returns to the SETTINGS menu.	

UNIVERSAL TERMINAL FEATURES

Military Time Conversion Chart

Regular Time	Military Time	Regular Time	Military Time
Midnight	0000	Noon	1200
1:00am	0100	1:00pm	1300
2:00am	0200	2:00pm	1400
3:00am	0300	3:00pm	1500
4:00am	0400	4:00pm	1600
5:00am	0500	5:00pm	1700
6:00am	0600	6:00pm	1800
7:00am	0700	7:00pm	1900
8:00am	0800	8:00pm	2000
9:00am	0900	9:00pm	2100
10:00am	1000	10:00pm	2200
11:00am	1100	11:00pm	2300